


BETRIEBSANLEITUNG
OPERATING INSTRUCTIONS
INSTRUCTIONS DE SERVICE
ISTRUZIONI D'USO
HANDLEIDING
INSTRUCCIONES PARA EL MANEJO
MANUAL DE INSTRUÇÕES
NAUDOJIMOSI INSTRUKCIJA
KASUTUSJUHEND
LIETOŠANAS INSTRUKCIJA
DRIFTSINSTRUKS
DRIFTSINSTRUKTIONER
DRIFTSVEJLEDNING
INSTRUKCJA OBSŁUGI

KEZELÉSI ÚTMUTATÓ
NÁVOD K OBSLUZE
NAVODILO ZA UPORABO
NÁVOD NA OBSLUHU
UPUTE ZA RAD
MANUAL DE OPERATII
TREORACHA OIBRIÚCHÁIN
ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ
EL KITABI
ИНСТРУКЦИИ ЗА ЕКСПЛОАТАЦИЯ
ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ
取扱説明書
사용설명서
使用说明书

VX 4.40

MAKE IT BECKER.



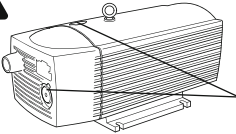







1



MAX. VACUUM



mbar



MAX.



m³/h




L_{PA}

DIN EN ISO 11203
Accuracy Class 2
K_{PA} = 3 dB(A)
l ← 1m

L_{PA} = 67 dB(A) - 50Hz
L_{PA} = 72 dB(A) - 60Hz

2



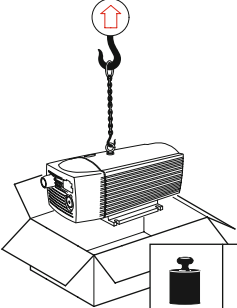

39 kg
85 lbs

3

A > 100mm
A > 4"




> 5°C/41°F
< 45°C/113°F



max. 90%



max. 800m

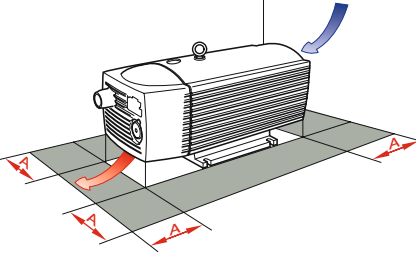

4




6 mm




5 mm




7 mm

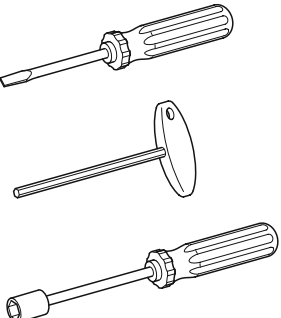


5

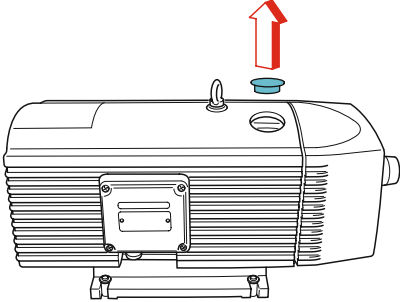


6

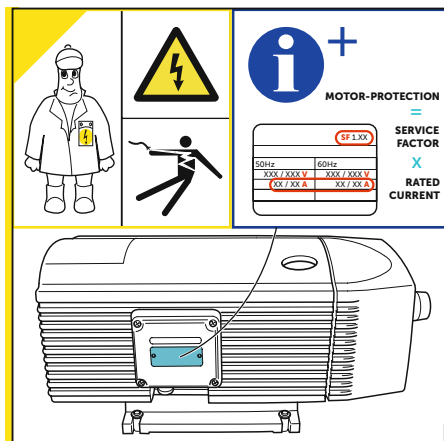


7

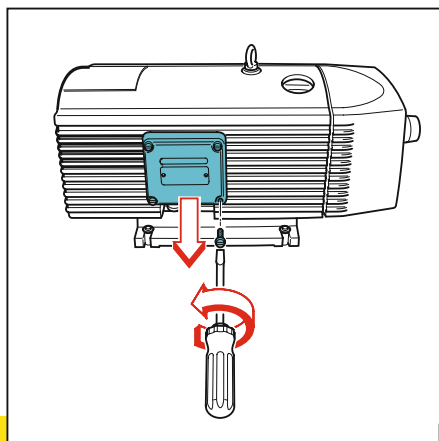


8

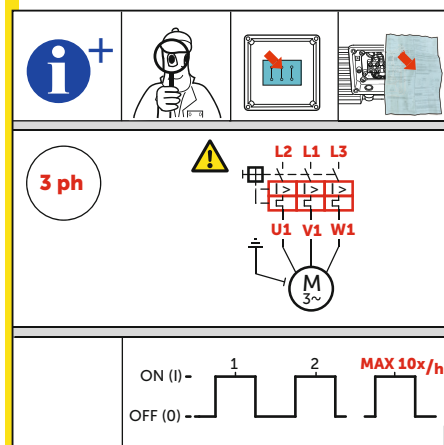


9

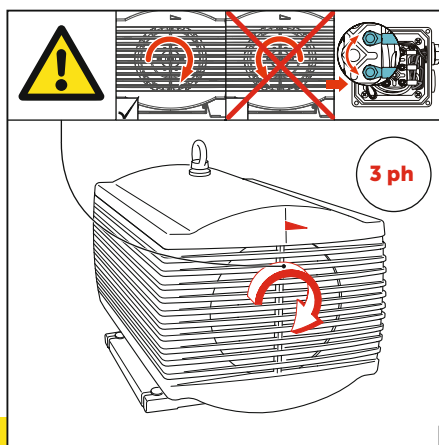

10

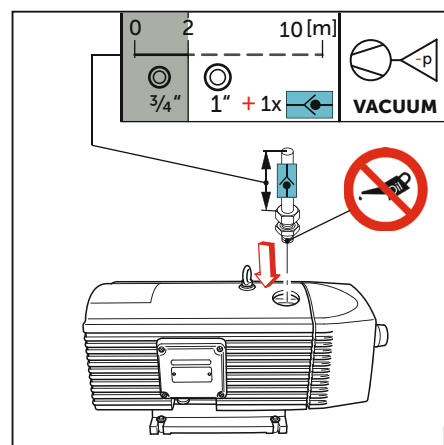


11

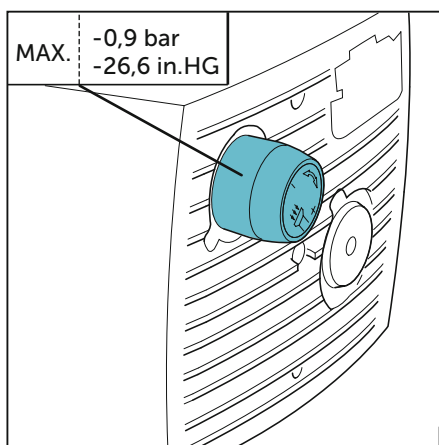

12

Maintenance

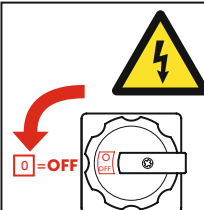


n=0min⁻¹

2-3 Min




13

14

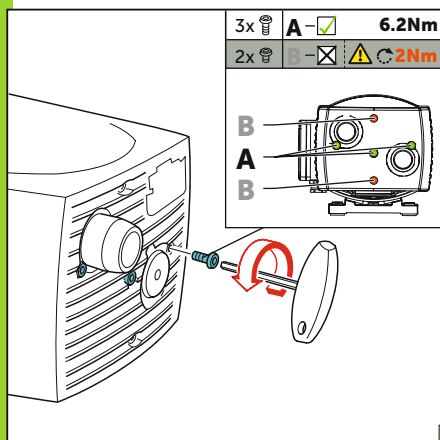


15

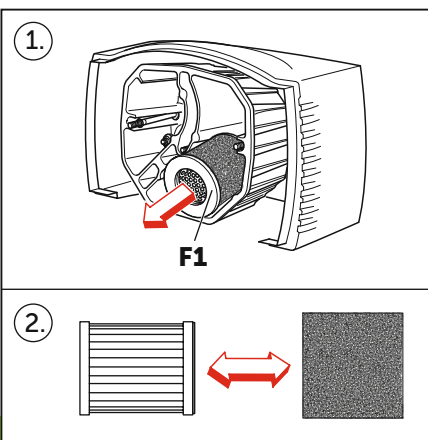

16




17

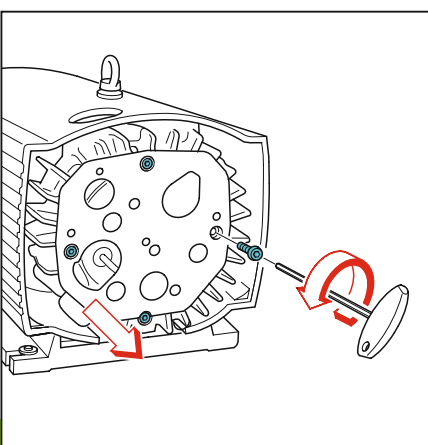


18



7500 h

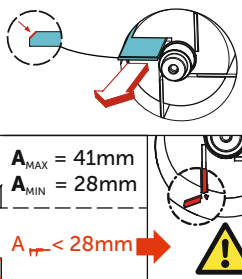

 $A_{MAX} = 41mm$
 $A_{MIN} = 28mm$
 $A < 28mm$ 




A
MAX.
MIN.



→ No. 90140900007 (SET)

19

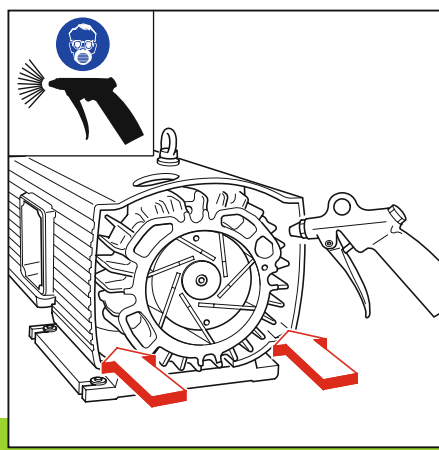

20






www.becker-international.com

21



WWW.BECKER-INTERNATIONAL-SHOP.COM

Gebr. Becker GmbH
Hoelker Feld 29-31
42279 WUPPERTAL
GERMANY
info@becker-international.com
www.becker-international.com





MAKE IT BECKER.