


BETRIEBSANLEITUNG
OPERATING INSTRUCTIONS
INSTRUCTIONS DE SERVICE
ISTRUZIONI D'USO
HANDLEIDING
INSTRUCCIONES PARA EL MANEJO
MANUAL DE INSTRUÇÕES
NAUDOJIMOSI INSTRUKCIJA
KASUTUSJUHEND
LIETOŠANAS INSTRUKCIJA
DRIFTSINSTRUKS
DRIFTSINSTRUKTIONER
DRIFTSVEJLEDNING
INSTRUKCJA OBSŁUGI


KEZELÉSI ÚTMUTATÓ
NÁVOD K OBSLUZE
NAVODILO ZA UPORABO
NÁVOD NA OBSLUHU
UPUTE ZA RAD
MANUAL DE OPERATII
TREORACHA OIBRIÚCHÁIN
ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ
EL KITABI
ИНСТРУКЦИИ ЗА ЕКСПЛОАТАЦИЯ
ИНСТРУКЦИЯ ПО ЭКСПЛУАТАЦИИ
取扱説明書
사용설명서
使用说明书

BCP 300


MAKE IT BECKER.

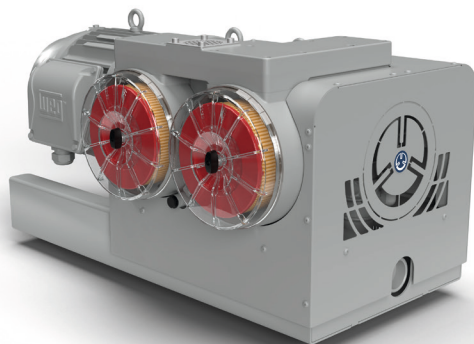

Type 1
with integrated filter

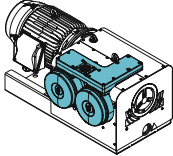

Type 2
without filter
for external filtration

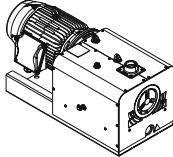


1



www.becker-international.com


2

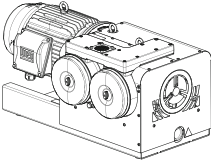



AIR

 3



BECKER	
Line	BCP 300
Model	BCP 300
Compressor	BCP 300
Capacity	300 m³/h
Power	300 W
Current	300 A
Water capacity	300 l/h
Water capacity	300 l/h
Pressure	300 mbar



CE

m³/h
mbar

DIN EN ISO 11203
Accuracy Class 2
K_{pA} = 3 dB(A)
1←1m

L_{pA} = 82 dB(A) - 50Hz
L_{pA} = 86 dB(A) - 60Hz

4



> 0°C/32°F
< 40°C/104°F

INLET AIR

> 0°C/32°F
< 40°C/104°F

Avoid condensation



max. 90%




≤1000m
>1000m

Please consult
BECKER




A > 100mm
A > 4"

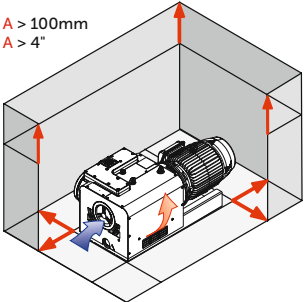

5








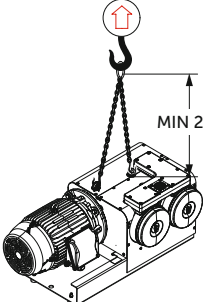



MIN 2m




motor dependent
276-335 kg
607-738 lbs

6

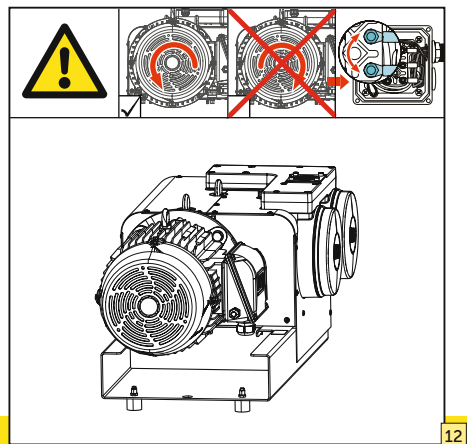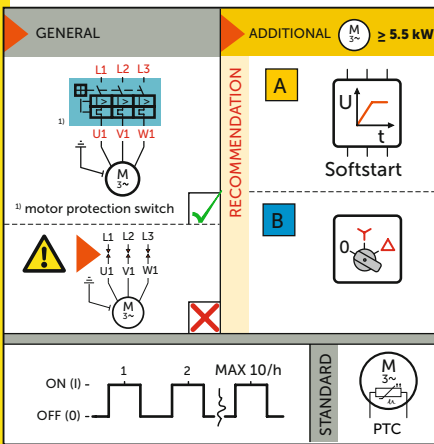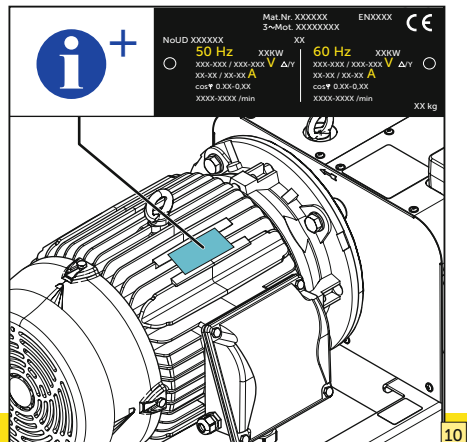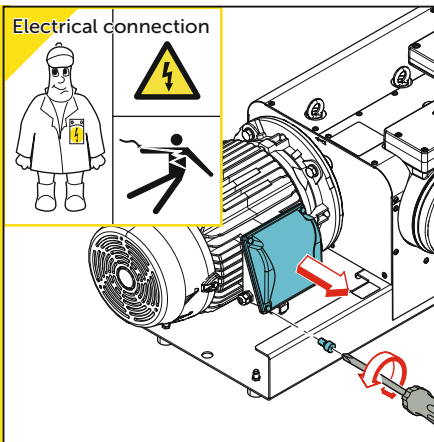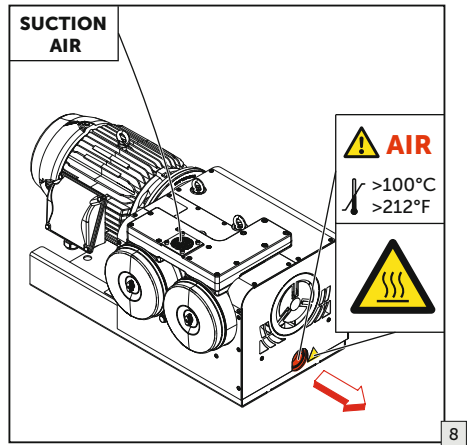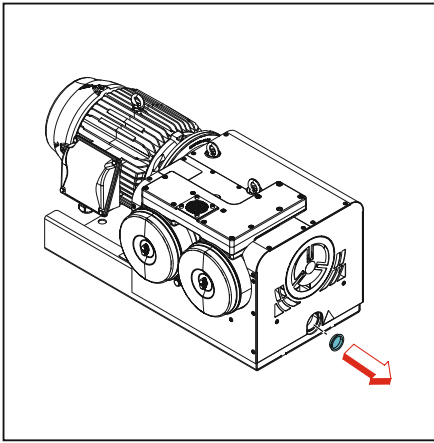


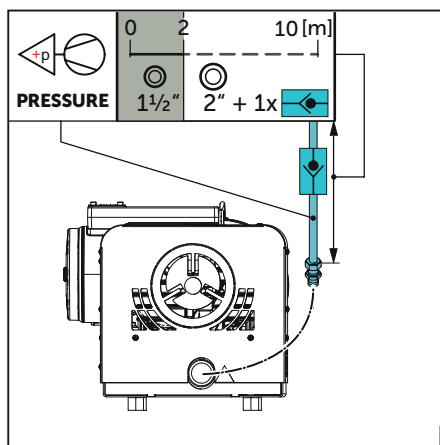


13

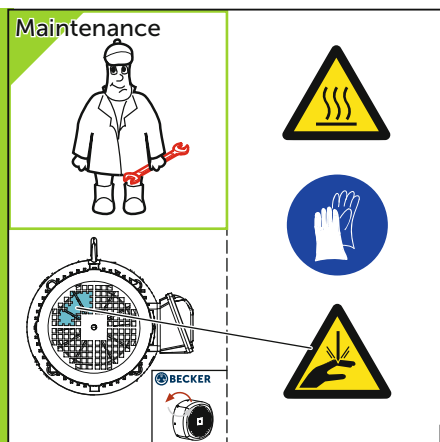


14

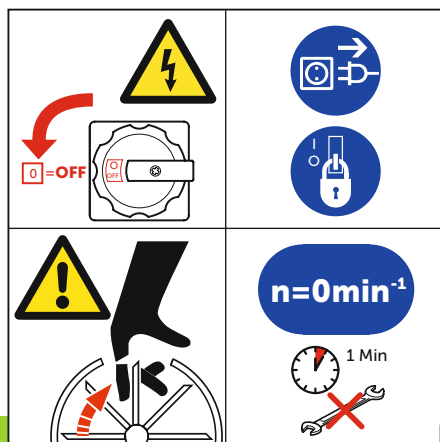





15

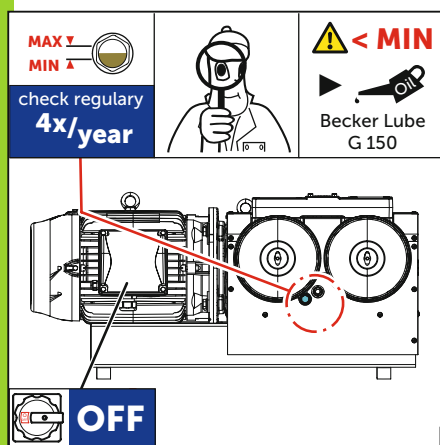

16

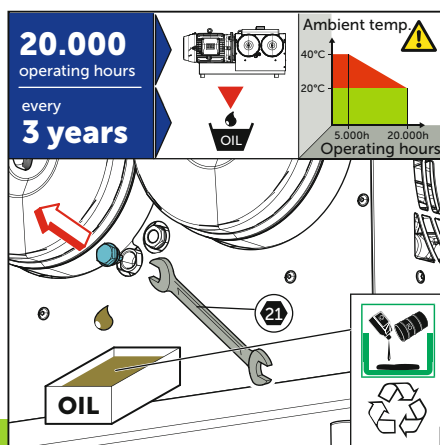

17

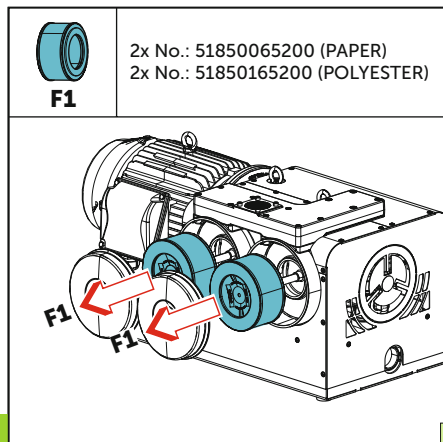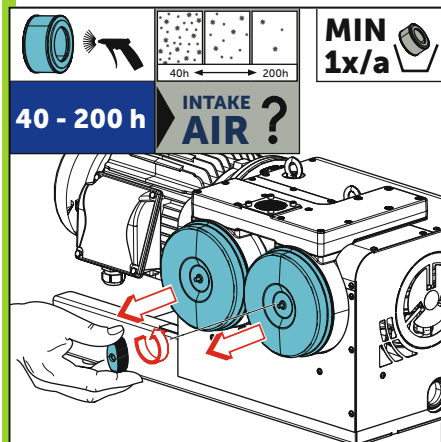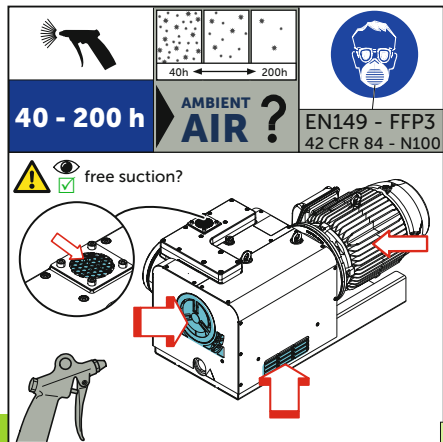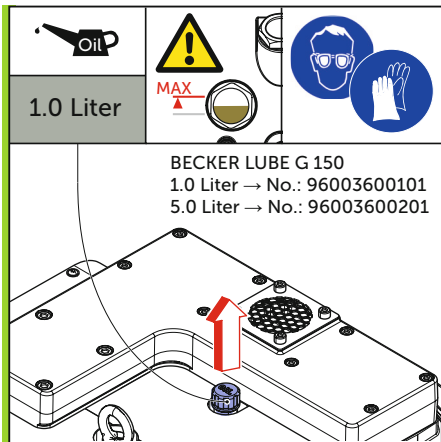

WWW.BECKER-INTERNATIONAL-SHOP.COM

Gebr. Becker GmbH
 Hölker Feld 29-31
 42279 WUPPERTAL
 GERMANY
info@becker-international.com
www.becker-international.com





MAKE IT BECKER.

28100065560 | 2023-03-17 | All rights reserved